



Care/Cleaning Instructions:

- Clean with toy cleaner or warm water and a mild disinfectant soap before and after each use.
- Towel or air dry completely before storing.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

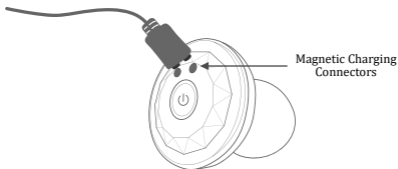

Charging Instructions:

- All Viben toys come with a factory charge. We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Your plug features a magnetic charging cable; simply attach the cable to the two magnetic connectors at the bottom of the toy.
- Your remote features a plug in charging cable; simply insert the charging cable securely into the charging port at the bottom of the remote control.
- Your Cheeky Charm Vibrating Butt plug's indicator light will remain steady when your toy is fully charged.
- Full charging time is 2.5 hours.
- Play time is approximately 1 hour.

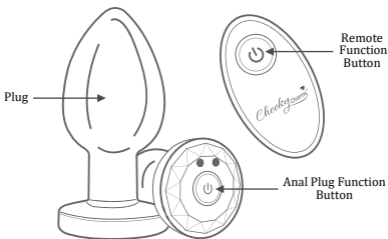

How to use a Cheeky Charm:

- Allow your toy and remote to fully charge before play.
- Press and hold the function button on the bottom of the plug for 3 seconds. Indicator light will illuminate when your toy is powered on and in standby mode.
- Press the function button on your toy or on the remote control to toggle through the 10 vibration patterns.
- We suggest applying your preferred lubricant around the anus and on the plug.
- Press the tip of the plug against the anus and gradually increase pressure until the anal plug is comfortably inserted.
- Be sure not to insert the base of the plug.
- To power off, press and hold the function button on your butt plug. Indicator light will turn off when the toy is powered down completely.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations and/or anal fissures.
- Do not use your toy if you are experiencing a hemorrhoid or prostate condition.
- Discontinue use immediately if any irritation or discomfort occurs.