




## Care/Cleaning Instructions:

- Ensure your toy and remote control are switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

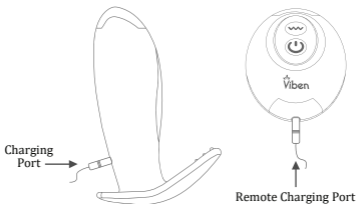

## Charging Instructions:

- All Viben toys come with a factory charge. We suggest fully charging your toy before use.
- Only use the charger provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Intrigue features a plug in charging cable; simply insert the charging cable securely into the charging port.
- Intrigue's remote features a plug in charging cable; simply insert the charging cable securely into the charging port.
- Intrigue will blink while charging.
- Intrigue's light will remain steady when your toy and remote are fully charged.
- Full charging time is 90 minutes.
- Play time is approximately 50 minutes.



## How to experience Intrigue:

- Allow your toy and its remote control to fully charge before play.
- Press and hold the power button for 3 seconds. Indicator light will blink when your toy is powered on and in standby mode.
- Press the function button on your toy or on the remote control to toggle through the 10 vibration functions.
- Press and hold the function button for 3 seconds on your remote control to pause Intrigue. Indicator light will blink while Intrigue is in standby mode.
- Press and hold the function button on your toy to power Intrigue off. Indicator light will turn off when the toy is powered down completely.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.

