



## Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to let your toy dry completely before storing.
- Be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

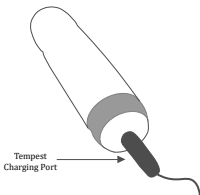

## Charging Instructions:

- All Viben toys come with a factory charge. We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Tempest features a plug in charging cable; simply insert the charging cable securely into the charging port.
- Tempest will blink while charging.
- Tempest's light will remain steady when your toy is fully charged.
- Full charging time is 1 hour.
- Play time is approximately 1 hour.

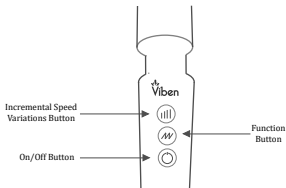

## How to indulge in Tempest:

- Allow your toy to fully charge before play.
- Press the lower on/off button to power Tempest on.
- Press the top button to toggle through speed variations.
- Press the center button to change functions.
- Press the lower on/off button to power off. Indicator light will turn off when the toy is fully powered down.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.