



Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Remove Obsession's silicone massage head covering and clean in-between use.
- Be sure to let your toy dry completely before storing.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

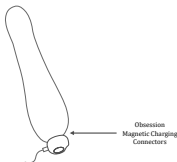

Charging Instructions:

- All Viben toys come with a factory charge. We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Obsession features a magnetic charging cable; simply attached the cable to the two magnetic connectors at the bottom of the wand.
- Obsession will blink while charging
- Obsession's light will remain steady when your toy is fully charged.
- Full charging time is 3 hours.
- Play time is approximately 1 hour.

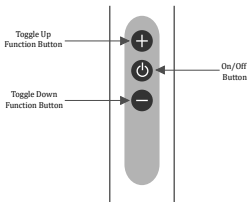

How to experience Obsession:

- Allow your toy to fully charge.
- Press the center on/off button to power Obsession on/off.
- Press the plus and minus buttons to toggle between the 8 functions.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.