



Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to let your toy dry completely before storing.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

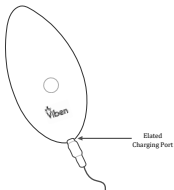

Charging Instructions:

- All Viben toys come with a factory charge. We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Elated features a plug in charging cable; simply insert the charging cable securely into the charging port.
- Elated will blink while charging.
- Elated's light will remain steady when your toy is fully charged.
- Full charging time is 1 hour.
- Play time is approximately 1 hour.

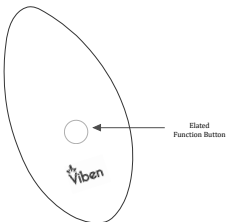

How to get experience Elated:

- Allow your toy to fully charge
- Press and hold the function button for 3 seconds to power Elated on. Indicator light will illuminate.
- Press the function button to toggle between the 10 functions.
- Elated will cycle through its functions as you press the center button.
- Press and hold the button for 3 seconds to turn Elated off. Indicator light will turn off.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.