



## Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- To clean the suction chamber, use a small amount of cleaning solution in the suction chamber. Switch Frenzy's suction feature on by holding down the top left button. This will allow your toy to expel the toy cleaner through the chamber and ensure there are no blockages. Excess solution will be flushed out through the air flow chamber on the back of your toy.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Be sure to let your toy dry completely before storing.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

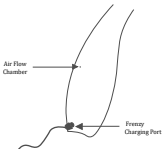

## Charging Instructions:

- All Viben toys come with a factory charge. We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Frenzy features a plug in charging cable; simply insert the charging cable securely into the charging port.
- Frenzy's indicator light will remain solid while the toy is charging.
- When your toy is fully charged, light will turn off.
- Full charging time is 1 hour.
- Play time is approximately 1 hour.

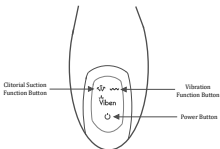

## How to feel Frenzy:

- Allow your toy to fully charge before play.
- Press and hold the bottom power button for 3 seconds to turn on/off your Frenzy. Red indicator light will become illuminated and begin to vibrate
- Press the top right button to toggle through the 12 vibration patterns.
- To turn off this function, hold down the top right button for 3 seconds.
- Press the top left button to activate the clitoral suction feature. Blue indicator light will become illuminated when this feature is on.
- Press the top left button to toggle through the 12 clitoral suction patterns.
- To turn off this function, hold down the top left button for three seconds. Frenzy features a quick release button. All functions will turn off by simply pressing the bottom power button. All indicator lights will be off when your toy is completely powered down.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.