


Care/Cleaning Instructions:

- Ensure your toy and remote control are switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

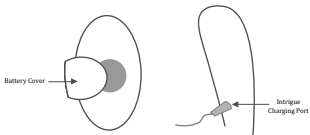

Charging Instructions:

- All Viben toys come with a factory charge. We suggest fully charging your toy before use. Remote control comes with a CR2032 3V battery.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Only use a CR2032 3V battery in your remote. Using any other battery may cause malfunction.
- Do not charge your battery in or around water.
- Intrigue features a plug in charging cable; simply insert the charging cable securely into the charging port.
- To change the battery in the remote control, remove the outer covering and replace the battery as needed.
- Intrigue will blink while charging.
- Intrigue's light will remain steady when your toy is fully charged.
- Full charging time is 90 minutes.
- Play time is approximately 50 minutes.

How to experience Intrigue:

- Allow your toy to fully charge before play.
- Press and hold the function button for 3 seconds to power Intrigue on. Power light will illuminate when the toy is in standby mode.
- Press the function button once on Intrigue or the remote control to toggle through the 10 vibration patterns.
- Press and hold the function button for 3 seconds to turn Intrigue off. Indicator light will turn off when the toy is fully powered down.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations
- Discontinue use immediately if irritation or discomfort occurs.

