


How to feel Zazzle:

- Allow your toy to fully charge before play.
- Press and hold the middle power button for 3 seconds to power on/off, Zazzle will go into Standby Mode and light will remain illuminated while the device is powered on. Indicator light will turn off when the device is powered fully off.
- Press the bottom button to toggle through different vibration patterns. Hold for 3 seconds to power off the vibration function.
- Press the top button to toggle through the different thumping and suction functions. Hold for 3 seconds to power off the thumping and suction function.
- All indicator lights will be off when Zazzle is fully powered off.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.



Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to let your toy dry completely before storing.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

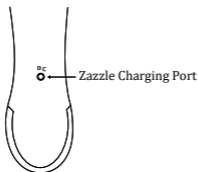

Charging Instructions:

- All Viben toys come with a factory charge. We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Zazzle features a plug in charging cable; simply insert the charging cable securely into the charging port.
- Zazzle's indicator light will pulse on and off while charging.
- When your toy is fully charged, the indicator light will remain illuminated.
- Full charging time is 3 hours.
- Play time is approximately 45 minutes.