





Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to let your toy dry completely before storing.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

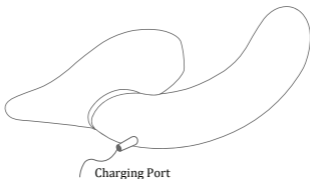

Charging Instructions:

- We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Symphony features a plug in charging cable; simply insert the charging cable securely into the charging port.
- Your toy will blink while charging.
- Symphony's light will remain steady when your toy is fully charged.
- Full charging time is 2 hours.
- Play time is approximately 1.67 hours.

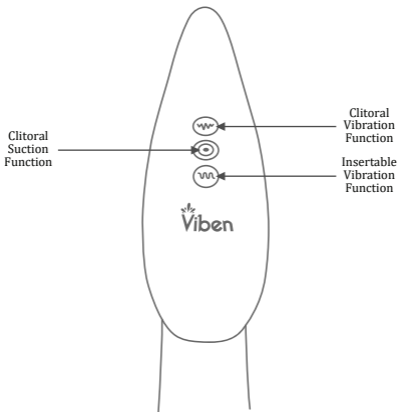

How to create a Symphony:

- Allow your toy to fully charge before play.
- Press and hold each function button for 3 seconds to turn on/off vibration/suction functions. Indicator light will become illuminated when functions are on.
- Press the bottom function button to toggle through the insertable vibration functions.
- Press the middle function button to toggle through the clitoral suction functions.
- Press the top function button to toggle through the clitoral vibration functions.
- Swivel the rabbit extension left and right to switch between clitoral suction and vibration.
- All indicator lights will be off when your toy is fully powered off.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.