





## Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use. Be sure to clean in between each petal.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Be sure to let your toy dry completely before storing.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

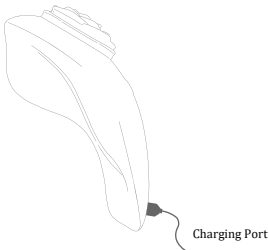

## Charging Instructions:

- We suggest fully charging your toy before use.
- Only use the charger provided to charge your toy. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Secret Seduction panty vibe and remote feature a USB magnetic charging cable; simply attach the cable securely to the two magnetic connectors.
- Secret Seduction's indicator light will blink while the toy and remote are charging.
- When your toy is fully charged, light will remain steady.
- Full charging time is 1.2 hours.
- Play time is approximately 1 hour.

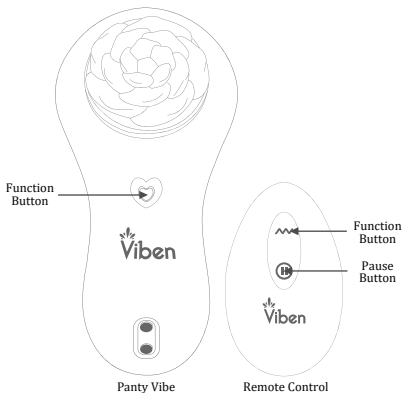

## How to Bloom Orgasms:

- Allow your toy to fully charge before play.
- Press and hold the function button on your panty vibe for 3 seconds. Indicator light will remain steady when your toy is powered on and in standby mode.
- Press the function button on your toy or on the remote control to toggle through the 10 vibration functions.
- Press the pause button on your remote control to pause Secret Seduction. Press again to resume play.
- Press and hold the function button on your toy to power Secret Seduction off. Indicator light will turn off when the toy is powered down completely.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.