





Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to let your toy dry completely before storing.
- Use the storage pouch provided and be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

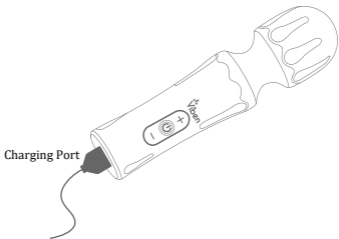

Charging Instructions:

- We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Mighty Muse features a magnetic charging cable; simply attached the cable to the two magnetic connectors at the bottom of the wand.
- Your toy will blink while charging.
- Mighty Muse's light will remain steady when your toy is fully charged.
- Full charging time is 1 hour.
- Play time is approximately 0.91 hour.

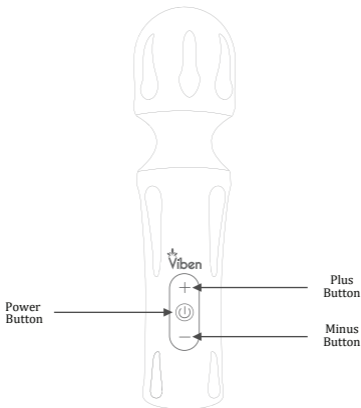

How to use Mighty Muse:

- Allow your toy to fully charge before play.
- Press and hold the power button for 3 seconds to turn on/off. Indicator light will illuminate when your toy is powered on.
- Press the on/off button to toggle through vibration patterns.
- Use the + and - buttons to increase or decrease speed.
- All indicator lights will be off when your toy is fully powered off.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.