





Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to let your toy dry completely before storing.
- Be sure to keep your toy separate from products made with different materials.
- Store in a clean, cool and dry place. Do not expose to direct sunlight.

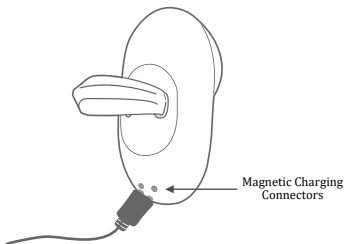

Charging Instructions:

- We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Kenley features a magnetic charging cable; simply attach the cable to the two magnetic connectors at the bottom of your toy.
- Your toy will blink while charging.
- Kenley's light will remain steady when your toy is fully charged.
- Full charging time is 1.5 hours.
- Play time is approximately 2 hours.

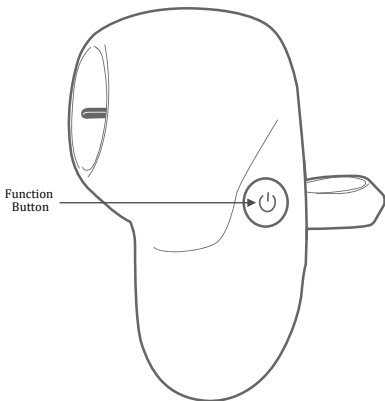

How to use Kenley:

- Allow your toy to fully charge before play.
- Press and hold the function button for 3 seconds to turn on/off. Indicator light will illuminate when your toy is powered on.
- Your toy will go into standby mode.
- Press the function button to toggle through the functions. Indicator light will blink as you toggle through the functions.
- All indicator lights will be off when your toy is fully powered off.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.