





## Care/Cleaning Instructions:

- Ensure your toy is switched off and the charger is completely disconnected before cleaning.
- We suggest cleaning your toy with toy cleaner or warm water and soap before and after each use.
- Use caution when cleaning your toy. Moisture in the battery component can cause malfunction.
- Be sure to let your toy dry completely before storing.
- Store your toy in a cool, dry place and be sure to keep your toy separate from products made with different materials.
- Do not expose to direct sunlight.

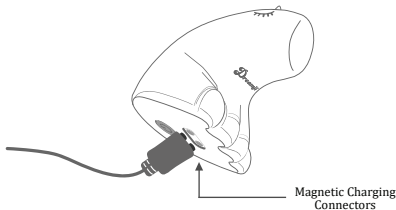

## Charging Instructions:

- We suggest fully charging your toy before use.
- Only use the charging cable provided to charge your battery. Using any other charging cable may cause malfunction.
- Do not charge your battery in or around water.
- Your toy features a magnetic charging cable; simply attach the cable to the two magnetic connectors at the bottom of your toy.
- Your toy will blink while charging.
- Your toy's light will remain steady when your toy is fully charged.
- Full charging time is 1 hour.
- Play time is approximately 1.17 hours.

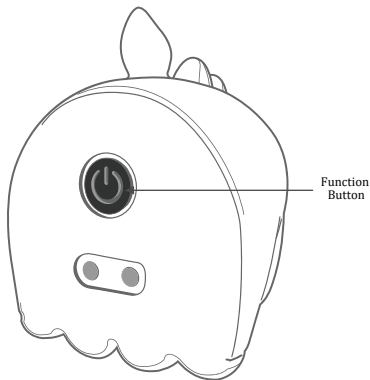

## How to use:

- Allow your toy to fully charge before play.
- Press and hold the power button for 3 seconds to turn on/off. Indicator light will illuminate when your toy is powered on.
- Press the function button to toggle through the functions. Indicator light will blink as you toggle through the functions.
- All indicator lights will be off when your toy is fully powered off.
- Do not use your toy on swollen, bruised or inflamed areas including skin lacerations.
- Discontinue use immediately if irritation or discomfort occurs.